


# WARREN FW-45 Lifting Fifth Wheel


## List of Authorized Replacement Parts

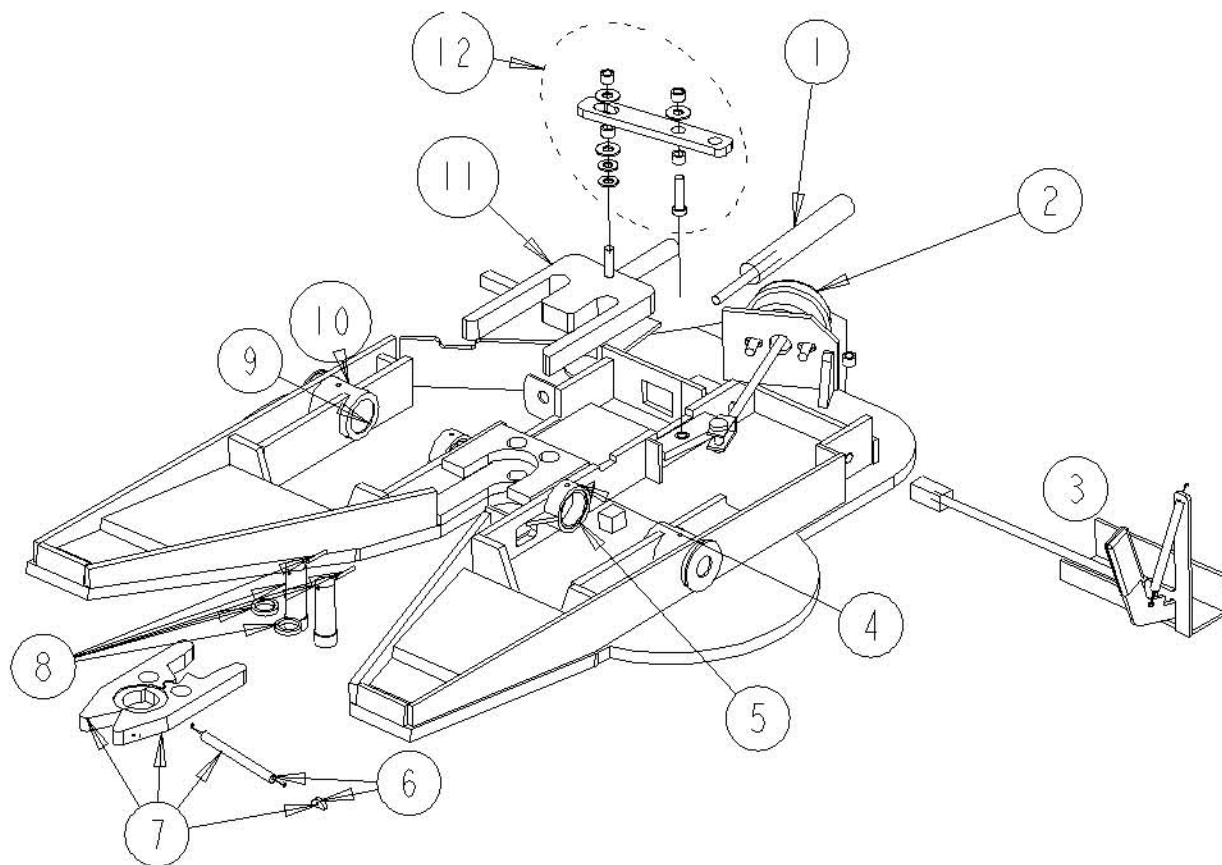

Drawing Number	Description	Part Number
1	Air Locking Cylinder with Nut	600-60001
2	Warren Air Chamber— <b>DO NOT SUBSTITUTE WITH ANY OTHER TYPE</b>	600-60002
3	Road Lock Repair Kit	600-60003
4	1" Top Plate Bearing Housing	600-60004
5	1" Connex Top Plate Bearing	600-60005
6	Jaw Spring	600-60006
7	Jaw Pair with Spring and Hook	600-60007
8	Jaw pin with Cotter Pin (2 required)	600-60008
9	3-3/8" Top Plate Bearing Housing	600-60009
10	3-3/8" Connex Top Plate Bearing	600-60010
11	Jaw Fork	600-60011
12	Locking Linkage	600-60012

# WARREN FW-45 Lifting Fifth Wheel

## List of Authorized Replacement Parts

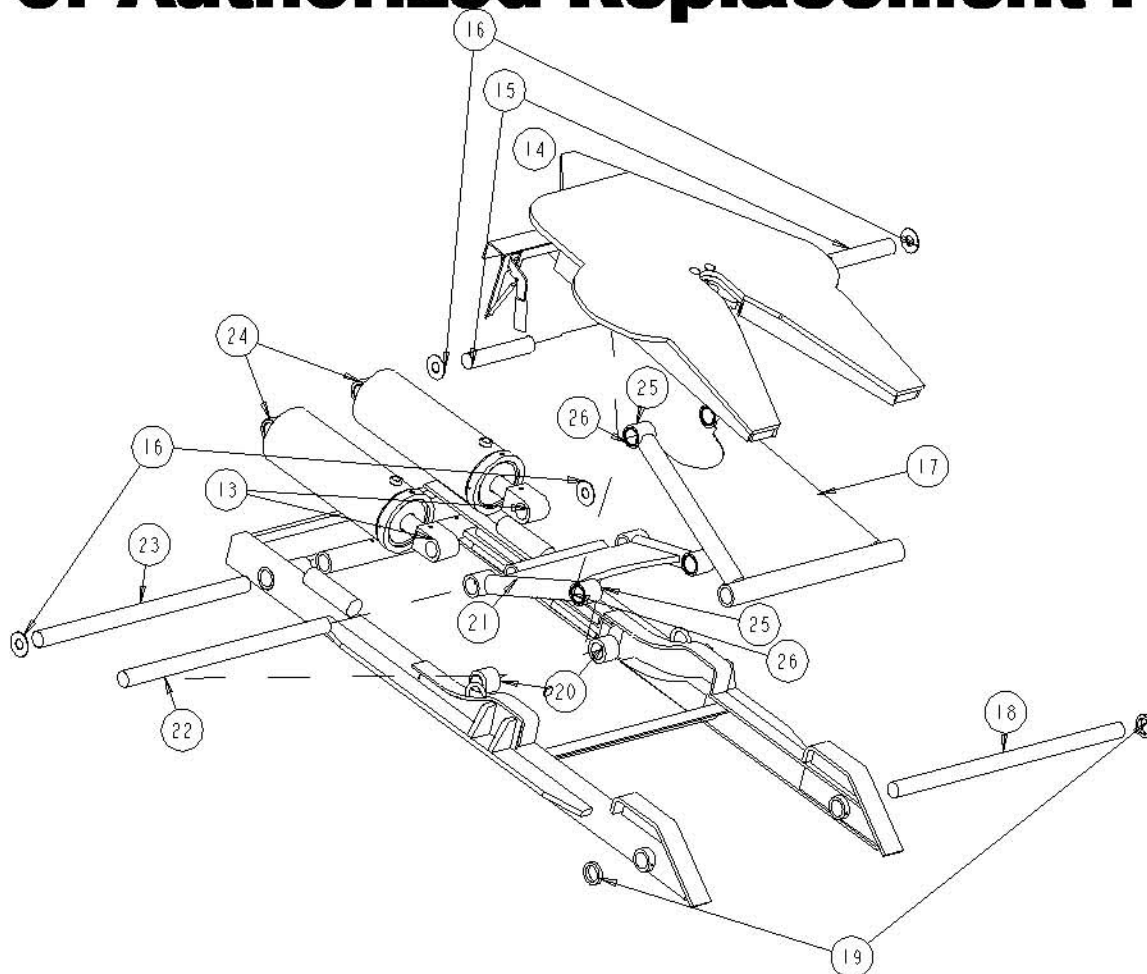

Drawing Number	Description	Part Number
13	Knuckle for hydraulic cylinder	600-80071
14	Fifth Wheel Plate	600-60151
15	Fifth Wheel Shaft (2 required)	600-60015
16	Flat Washer (2 required)	900-80223
17	Rear Elevator	600-60017
18	Rear Cross Shaft	600-60018
19	Shaft Retaining Collar (2 required)	600-60019
20	Roller Wheel (2 required)	600-60020
21	Front Elevator	600-60146
22	Roller Shaft	600-60022
23	Front Cross Shaft	600-60023
24	Hydraulic Cylinder	600-80002
25	2-3/4" Elevator Bearing Housing	600-60026
26	2-3/4" Connex Elevator Bearing	600-60027

